




# Canon EOS 300 Back Lock-Release Lever Replacement

This guide shows how to remove and replace the back lock-release lever.

Written By: Jordan Tang

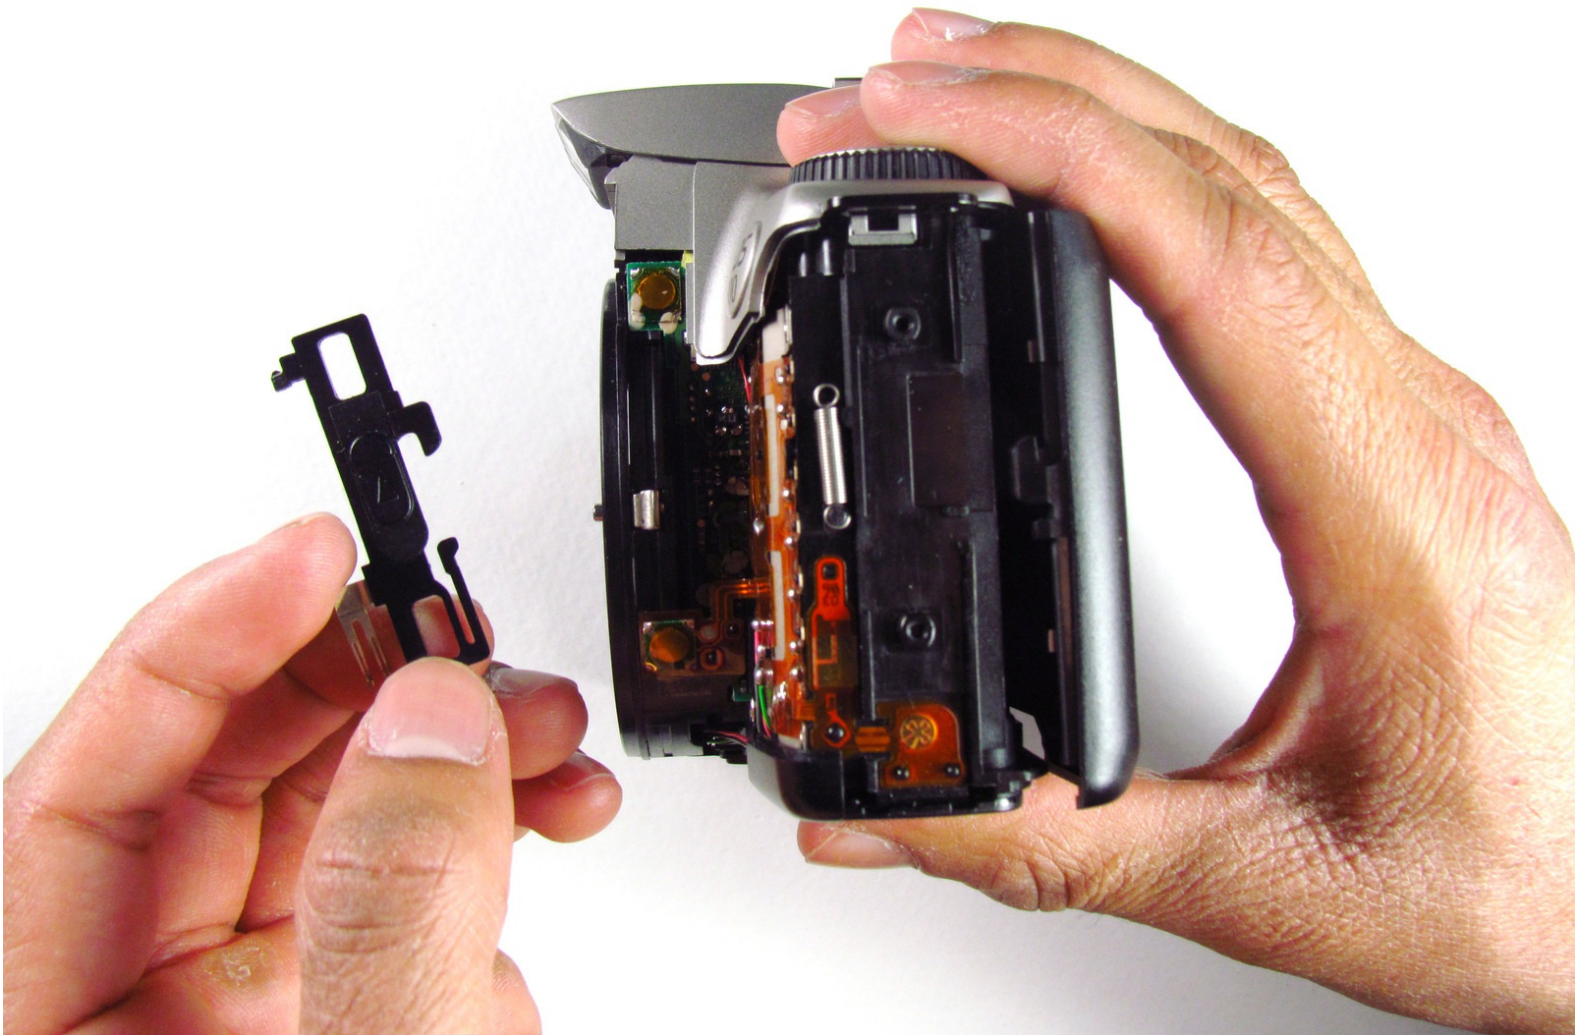

## INTRODUCTION

If the back lock-release lever is loose or broken, this will allow you to attempt to replace it.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Batteries



- Open up the battery door.


## Step 2



- Remove the batteries from the camera by sliding them out into your palm.



### Step 3 — Side Panel with Lever

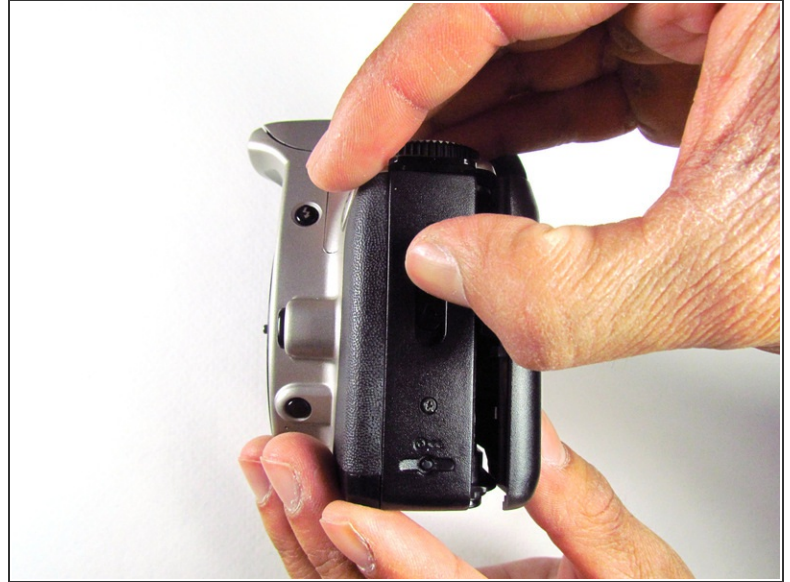



- Release the side latch to open the back panel.

### Step 4



- Remove the two black 4.5mm screws above and below the latch.

## Step 5

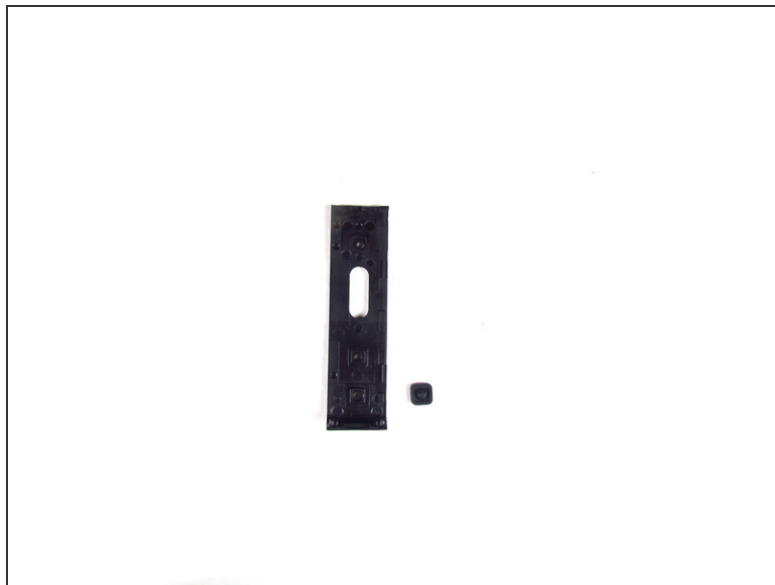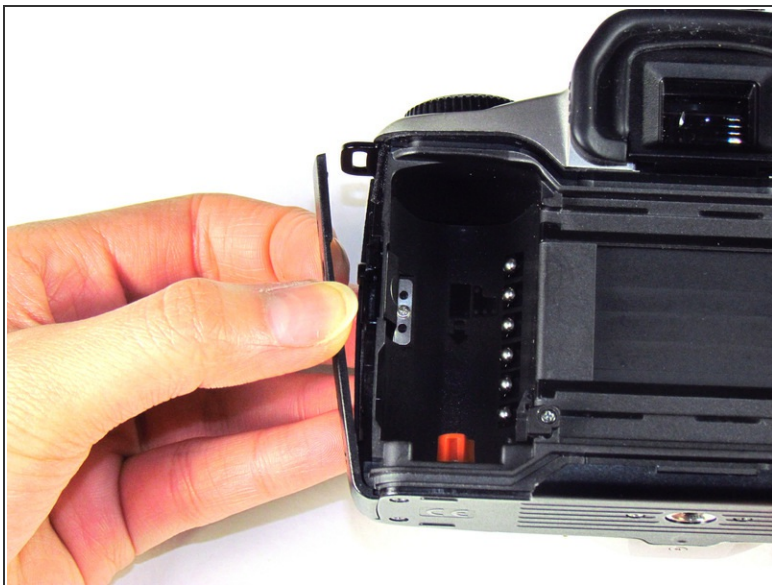

- Using your finger, carefully pry open the side panel from the top of camera.
- Pull panel downwards to remove.
- ⓘ Make sure to keep track of the small black piece of rubber under the latch.

## Step 6 — Front Panel



- Remove the two silver 6mm Phillips #1 screws.



## Step 7




- Flip camera over to the bottom.
- Remove the one 5mm Phillips #1 silver screw.

## Step 8



- Remove the front panel by pulling away from the side with the lever.

## Step 9 — Back Lock-Release Lever

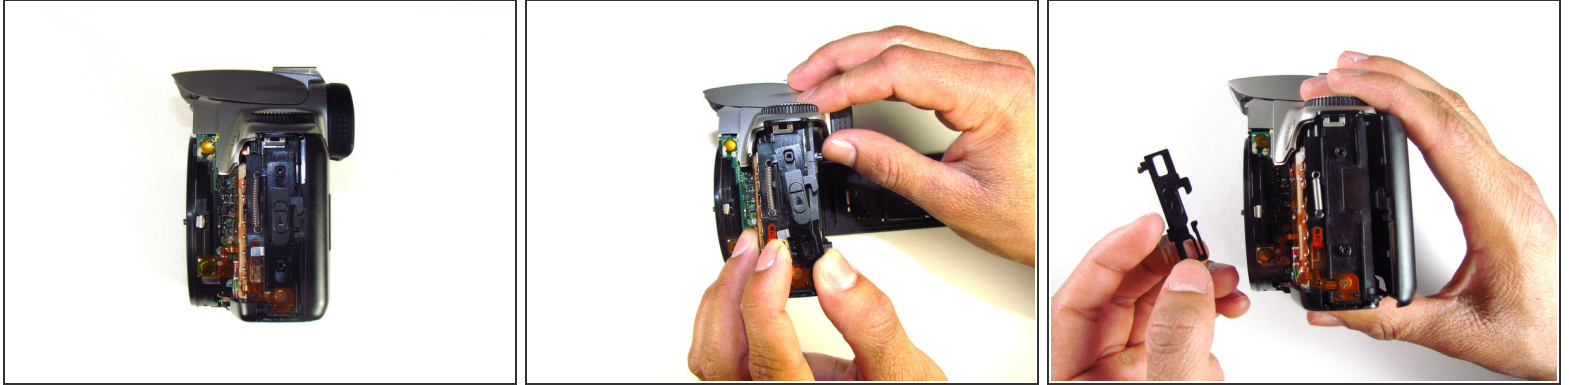

- Pull off the lever by pushing up from the bottom and pulling away from the bottom.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:53:05 PM.